




**INSTALLATION**

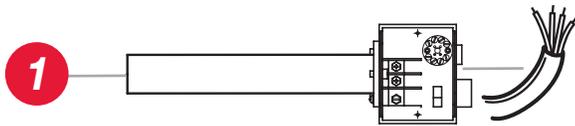

**1** MOUNT AND WIRE HEATER

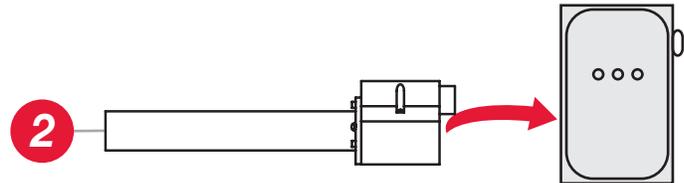

**2** WIRE HEATER TO CONTROL (G, H1, H2) and (S1, S2)

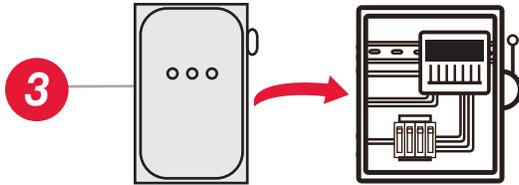

**3** WIRE CONTROL TO MAIN POWER (L1, L2, GND)

For detailed instructions use the QR code below to download the product manual



**PROPER TORQUE VALUES FOR FITTINGS**

**WARNING:** Avoid Damage to Housing


3/8" NPT (Sensor): 4 ft-lb

3/4" NPT (Power): 25 ft-lb


3/4" NPT (Air): 25 ft-lb

(Excessive force will crack housing and void warranty)


**START-UP**

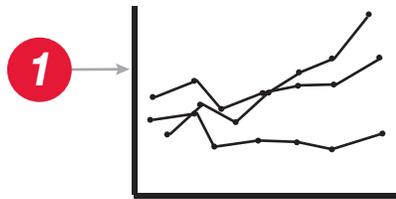


**1** REFERENCE PERFORMANCE CURVES

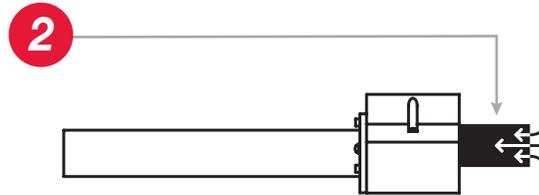

**2** CONNECT AIR SOURCE TO HEATER

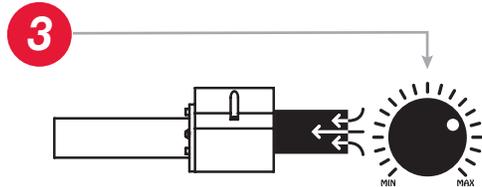


**3** TURN ON AIR

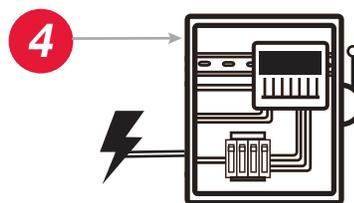


**4** ENERGIZE MAIN POWER LINE


**SHUT-DOWN**

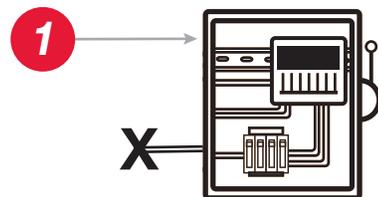

**1** TURN OFF MAIN POWER

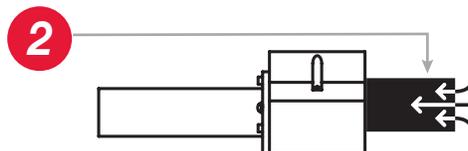

**2** CONTINUE AIR FLOW

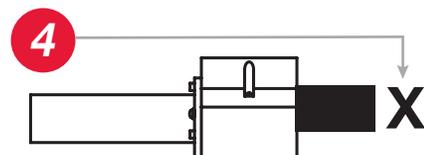

**4** TURN OFF AIR TO SYSTEM

DOWNLOAD  
MANUAL

